

60cm Semi-Integrated Dishwasher

ODWIS6015X

omega



Designed to Enhance
EST. 1981



Introducing your new 60cm Semi-Integrated Dishwasher

Adjusting the Upper Basket Height

1. To raise the upper basket, just lift the upper basket at the center of each side until the basket locks into place in the upper position.
2. To lower the upper basket lift the adjust handles on each side to release the basket and lower it to the lower position.

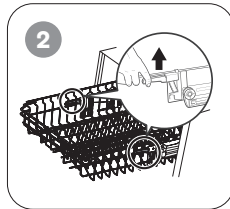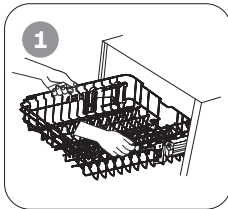

Wash Programs

	Auto Wash: This auto sensing program adjust the cycle based on water clarity.
ECO	ECO: This program is for normally soiled loads at rated capacity.
	Glass: Suitable for lightly soiled glassware.
	90 min: A fast 90 minute daily program for lightly soiled dishes.
	Rapid: A quick 30 minute wash suitable for lightly soiled dishes with no drying stage.
	Intensive: For heaviest soiled crockery, such as pots, pans, casserole dishes and dishes.
	Heavy: For heavily soiled loads, such as pots, plates, glasses and lightly soiled pans.

Additional Functions

$\frac{1}{2}$	Half Load: When the dishwasher is only at half capacity, you can choose this function to save energy and water.
	Delay Start: Increase or decrease the Delay Start time up to 24 hours.
	Extra Dry: The rinse cycle will perform at a higher temp. for a better drying result.

	Auto Door Opening: When set, the door will open automatically at the end of the program wash cycle.
	Extra Clean: This cycle will increase the main wash, rinse and drying times.
	Child Lock: Press and hold for 3 secs. to lock or unlock the buttons on the control panel

Details

Product Dimensions (W, D, H mm): 598 × 570 × 815
Warranty Period: 3 Years

Support

Telephone: 1300 11 HELP (4357)
Email: support@residentiagroup.com.au

